

Product details:

Item No.: 844751

Model No.: C9B

Technical data:

Input: 5V/1A


CCT: 4000K \pm 400

Luminous flux: 170-200Lm

Power of light: 5W \pm 15%

CRI: >80Ra

Tools list:

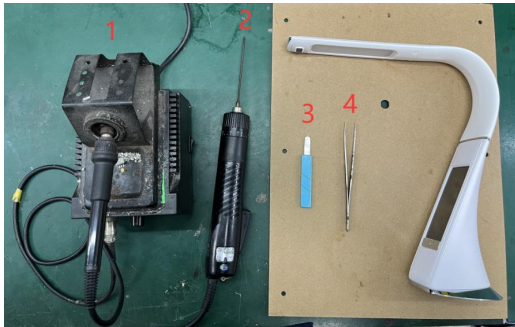


1. Soldering iron
2. Electric screwdriver
3. Pry piece
4. Tweezer


Instructions on how to remove the light source:

Note: Please operate following steps when the product is powered off.


Step1: Remove the bottom sponges and then remove the bottom screws with electric screwdriver.

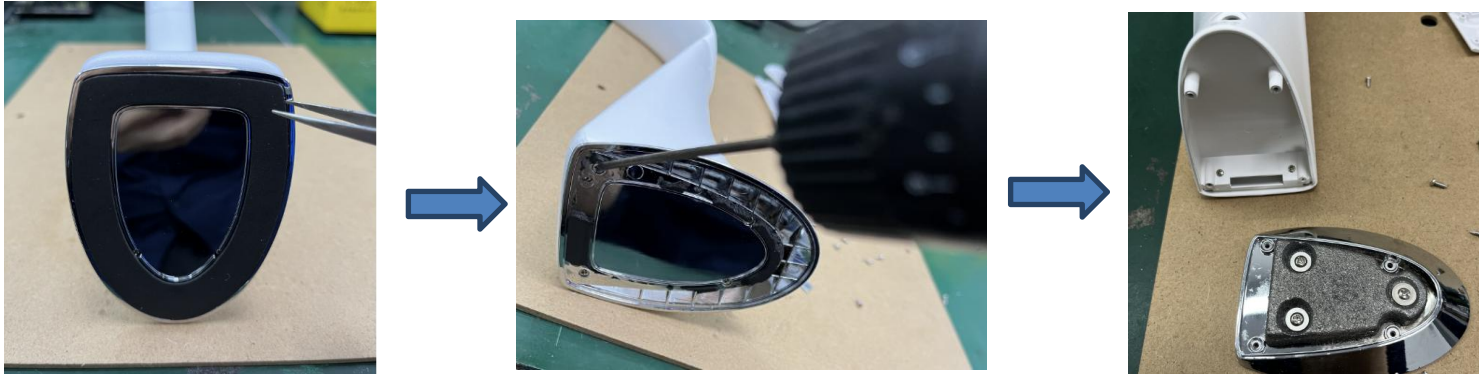


Step2: Remove the four screws on the plastic cover with electric screwdriver. And then use pry piece to pry open along the side gap buckle of the fuselage.

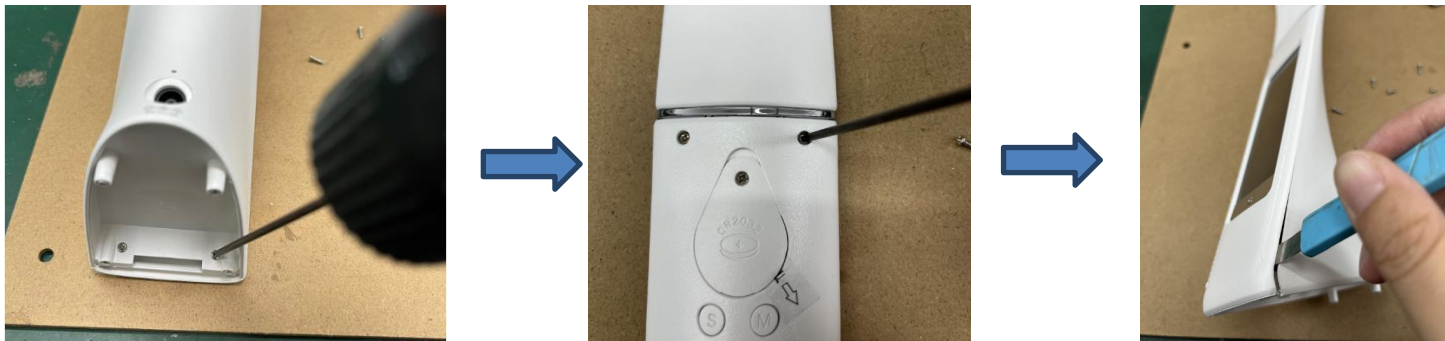


Step3: Remove the five screws on the board with electric screwdriver. And then remove the plug of this wire.

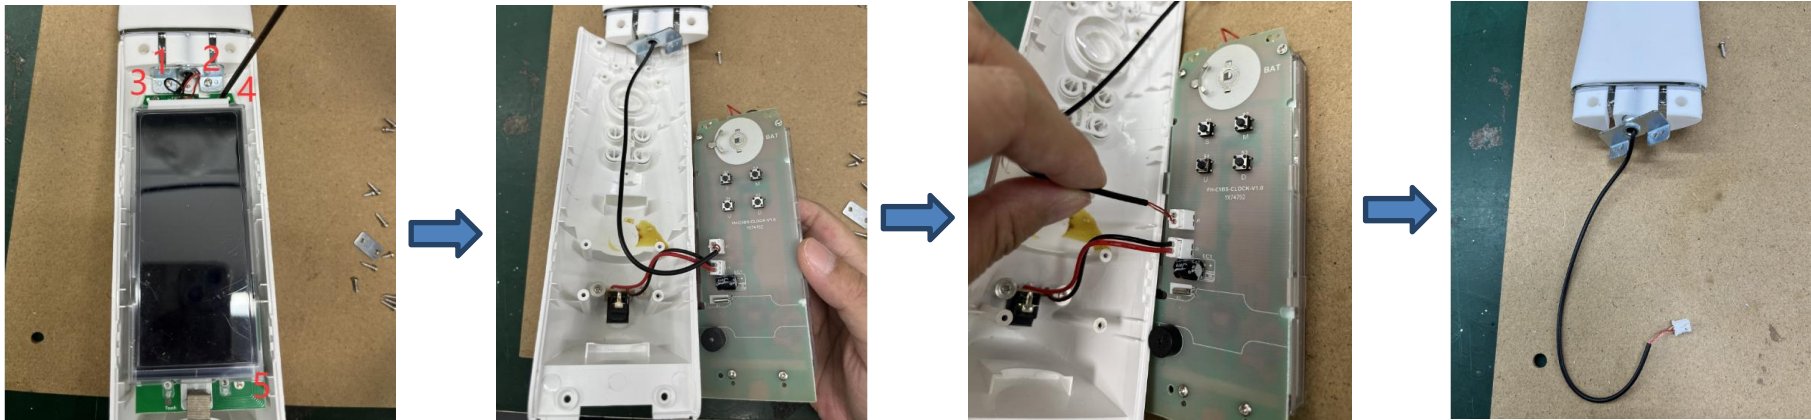


Step4: Remove the two sticker labels from the screw holes on the lamp head, and remove the two screws with electric screwdriver. And then use pry piece to pry open along the side gap buckle of the lamp head.

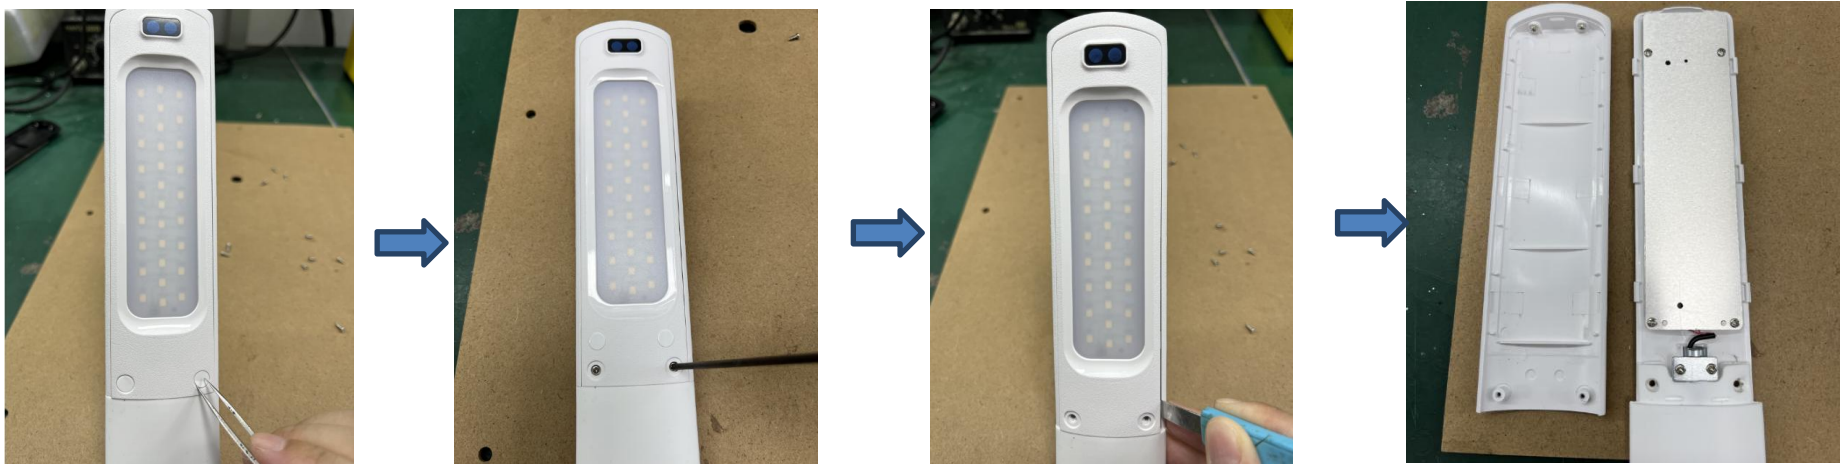


Step5: Use electric screwdriver to remove the six screws on the light board. Remove the plastic cover and use soldering iron to remove the wires from the light board.

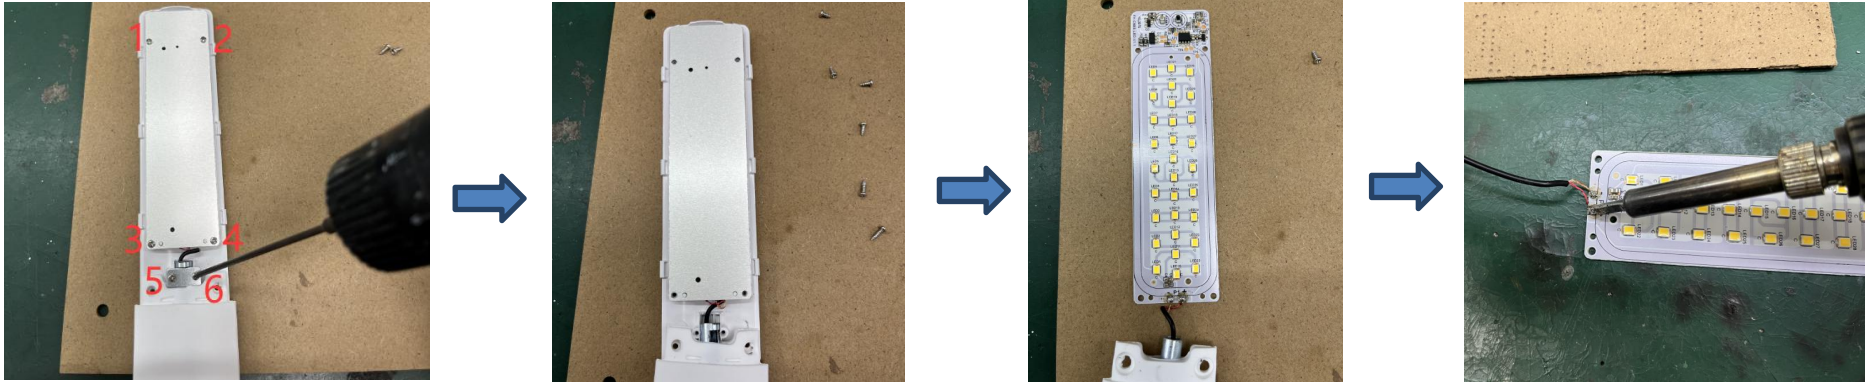

Step6: Pull the wire out from the bottom end. And then use the soldering iron to attach the positive and negative terminals in the original connection manner.

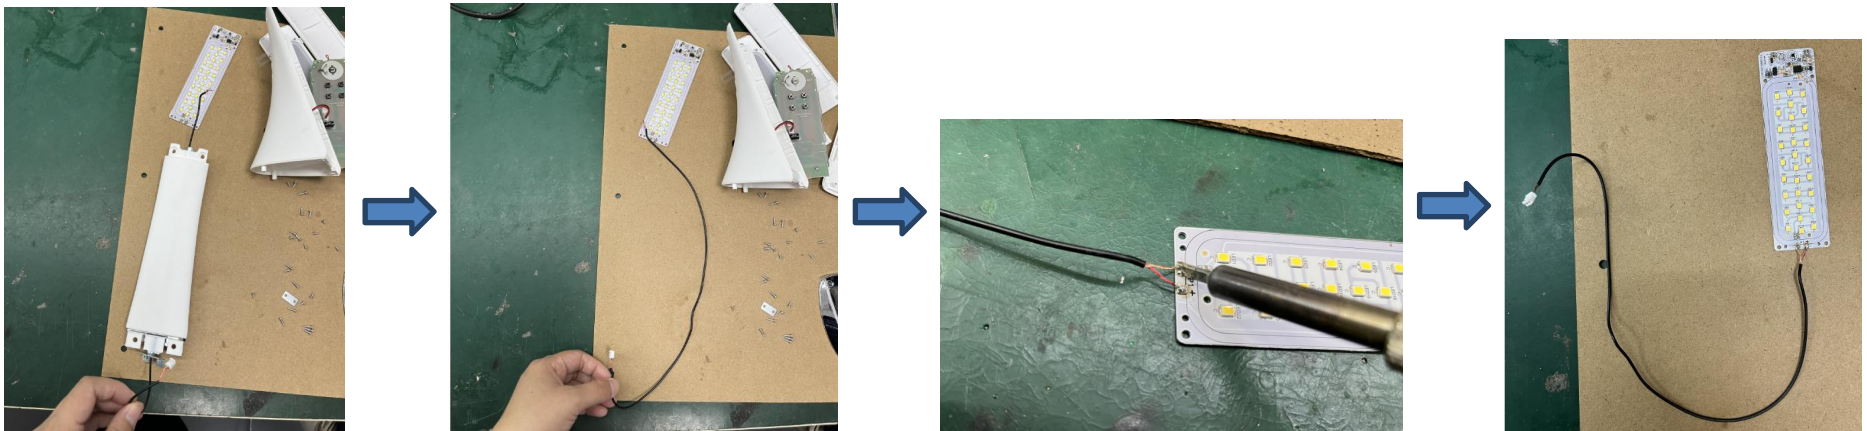

Step7: Now the light source was removed without being permanently damaged for verification purposes.

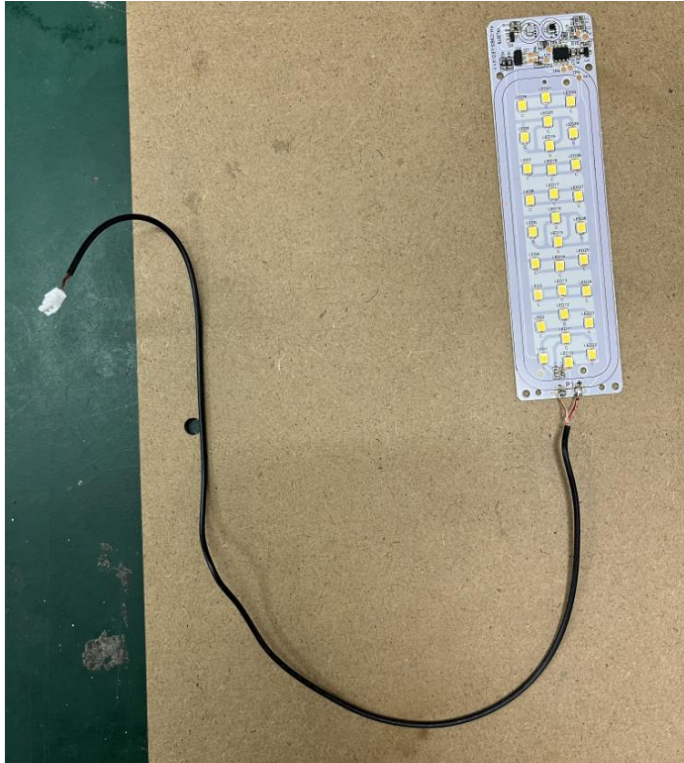

Red line: Positive pole “ + ”
Golden line: Negative pole “-”